



iMac Intel 20" EMC 2266 RAM Replacement

Written By: Walter Galan



INTRODUCTION

Use this guide to replace or upgrade your RAM chips.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:

- [PC3-8500 2 GB RAM Chip](#) (1)
- [PC3-8500 1 GB RAM Chip](#) (1)
- [PC3-8500 4 GB RAM Chip](#) (1)

Step 1 — Access Door



- Lay your iMac front side down on a table with the lower edge facing yourself.
- Loosen the single Phillips screw in the center of the access door.
- ⓘ This screw is captive in the access door.
- Remove the access door from your iMac.

Step 2 — RAM



- Use the sharp end of a spudger to pull the black plastic RAM tabs out of the memory bay.
- Pull the black plastic RAM tab away from your iMac to eject the RAM chip.

Step 3



- Grab the RAM chip by its edges and pull it straight out of its slot.
- ⓘ If two RAM chips are installed, repeat this process for the other chip.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-23 08:23:32 AM.